



1050 Heinz Avenue, Berkeley, California 94710 • (510) 848-4411 • www.alternativetechs.com

## HOW TO PROGRAM FUNCTION KEYS (for NEC SV Telephone Systems)

### To check the programming on a key:

1. Press the “Help” key below your display.
2. Press the key that you’d like to program.
3. The programming appears on the display. If a key is clear, the screen will read “Not Define”.
4. You can only program a key that is undefined.

### To clear key of previous programming (if needed):

1. Leave the handset in the cradle.
2. Press **Speaker + 751 (or 752 for certain types of keys)**.
3. Press the key you want to clear.
4. Press **00 (or 000 if you used 752)**.
5. Press **Speaker** to hang up.

### To program the key:

1. Leave the handset in the cradle.
2. Press **Speaker** and dial **751 (or 752 for 3-digit codes)**.
3. Press the key you want to program.
4. Press the 2-digit code for the function you want. A few common function codes are in the box below.

<i>code</i>	<i>feature</i>	<i>description</i>
<b>05</b>	Headset	Enabling or disabling your headset
<b>40</b>	Mic Cutoff	Mic Cutoff for muting handset and headset
<b>01+ ext. + HOLD</b>	Hotline	Create a “hotline” to someone else’s extension
<b>*03 + ext + HOLD + 12345678 + HOLD</b>	Ringing call coverage key	Programming one extension to ring when another extension rings
<b>77 + ext</b>	Voicemail coverage	Logging into another extension’s voicemail

Some programming requires 3 digit codes, which use the “752” service code. Some system use service codes 851/852. Talk to your representative for more details.

5. You will hear 3 confirmation beeps. Press ‘Speaker’ to hang up.